


Exploded diagram / Spares list

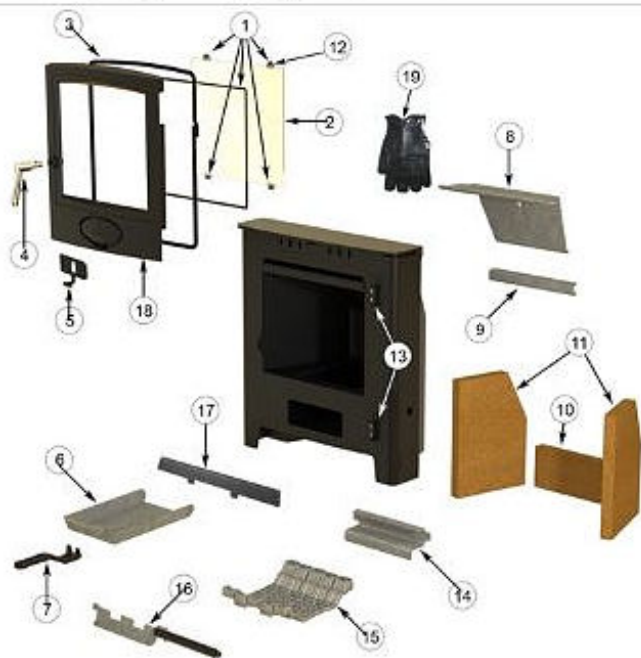

Parts

Diagram no.	Part code	Part name	Quantity
1	AFS1361	GASKET AND GLASS CLIPS (AFS1361)	1
2	AFS2035	GLASS KIT (AFS2035)	1
3	ARA014	ARADA ROPE KIT 2 (ARA014)	1
4	AFS3550	HANDLE ASSEMBLY (STAINLESS STEEL)	1
5	AFS2680	PRIMARY AIR CONTROLS (AFS2680)	1
6	AFS1395	ASH PAN (AFS1395)	1
7	AFS008	OPERATING TOOL (AFS008)	1
8	AFS2155	THROAT PLATE (AFS2155)	1
9	AFS1610	THROAT PLATE SPACING BAR (AFS1610)	1
10	AFS1410	LINER (REAR) (AFS1410)	1
11	AFS3150	LINER 190 x 270 x 25 SHAPED	2
12	AFS1010	GLASS CLIPS (AFS1010)	1
13	AFS2775	HINGE (RIGHT HAND) (AFS2775)	2
14	AFS1327	GRATE BAR SUPPORT (GBS001) (AFS1327)	1
15	AFS2375	FLEXI GRATE BAR - SMALL (AFS2375)	5
16	AFS2115	COMB ASSEMBLY (AFS2115)	1
17	AFS2130	FUEL RETAINER (AFS2130)	1
18	AFS2060	FIRE DOOR (AFS2060)	1
19	ARA010	ARADA HOT GLOVE (ARA010)	1