CHARNWOOD LA OPERATING INSTRUCTIONS QUICK GUIDE (to be used with the full operating instructions)

1. Lighting


a) Clear the grate and empty the ashpan.

b) Cover the whole grate with a thin layer of

fuel and put two or three firelighters on top.

c) Cover with a

layer of dry

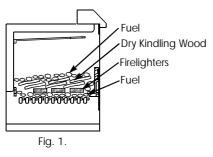

kindling wood. d) Partly cover

the kindling with a thin layer of fuel and light the fire lighters.

 e) Close the doors on the fire and turn the thermostat control to maximum.

f) After 10 - 15 minutes, once the fuel is alight, add more fuel sloping from the front up to the back as shown in Fig. 2.

2. Controlling The Fire

The rate of burning is controlled by the thermostat on the left of the fire. The number at the top of the dial is the number at which it is set.

The secondary air control, located above the doors, should be left open for burning Anthracite fuels.

3. Ash Clearance

a) Remove ash before riddling, usually in the morning when it is at its coolest. On the LA45/50 models use the carrying handle

 


Fig. 2

in conjunction with an oven glove or door tool to carry the ash pan.

 
b) Don't allow ash to come in contact with the bottom of the grate bars, if you do they will burn out rapidly.

C) Don't allow ash/coal to obstruct the

thermostat flap or over-heating will occur.

4. Riddling

a) Riddle with the doors closed.b) Rotate the tool upwards but not more than half way (45°)c) Return the tool to the horizontal position after riddling.



5. Throat Plate and Flueway Cleaning

a) Clean the throat plate and the flueway area above the throat plate at least monthly when the fire is low or not alight.

b) LA20/30 Models: the throat plate can be cleaned in position with the scraper tool provided.

c) LA45/50 Models: lower the throat plate with the tool provided and clean with the scraper.

6. Chimney Sweeping

Sweep the chimney twice a year. Remove the throat plate for access.

7. Glass Cleaning

a) Open the doors and allow the glass to cool.b) Use a damp soft cloth. For stubborn marks use a proprietary stove glass or ceramic hob cleaner. Do not use ashes or abrasive cleaners as these can cause damage to the glass.



Bishop's Way, Newport, Isle of Wight, PO30 5WS Tel: 01983 527552 Fax: 01983 821267