


General guidance for the Installation of the Selkirk STC Chimney System

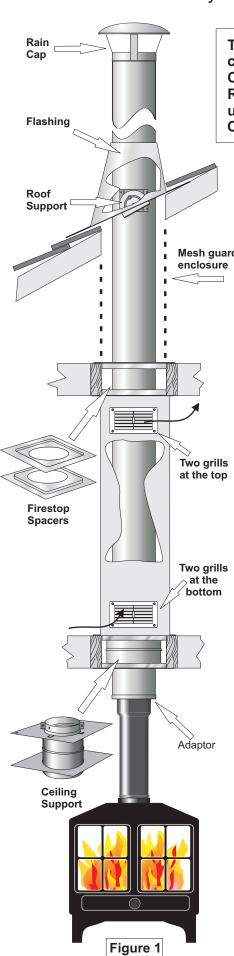

Free Standing Solid Fuel appliance. Method 1. With grill ventilated enclosure


Typical applications illustrating the correct ways of applying the Support Components in the STC Chimney Range where applied internally. Please use in conjunction with the STC Chimney Installation Instructions.

Ventilation Grills


NOTE that the grills MUST always be used in pairs on opposite faces of the enclosure. In every case, where grills are used, EACH must have a minimum unrestricted air ingress area of 110cm². They MUST also be used so that the slopes of the inlets point downwards and into the enclosure as shown here.



If the enclosure is in the corner of the room, then the grills, (both upper and lower), can be located on two adjacent sections of the enclosure.

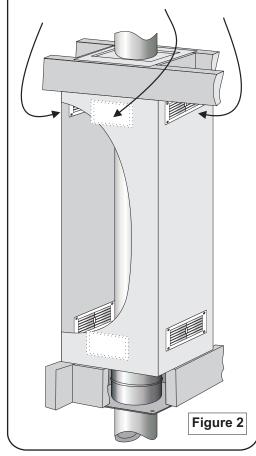

See side two for external application illustrations as well as Installation Guidance.

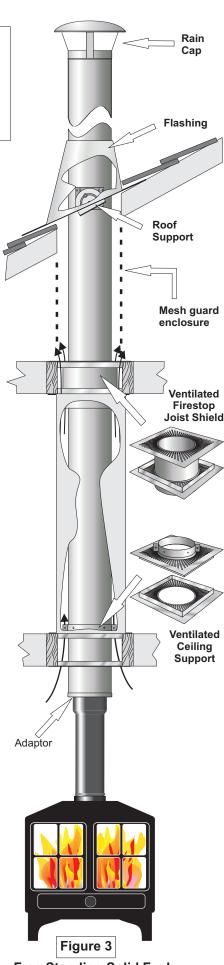

Free Standing Solid Fuel appliance. Method 21. With Ventilated Supports.

General guidance for the Installation of the Selkirk STC Chimney System (continued)

